


MOBILE HOME SERVICE TERMINATION

DIRECT WIRE TYPE TO SERVICE POLE

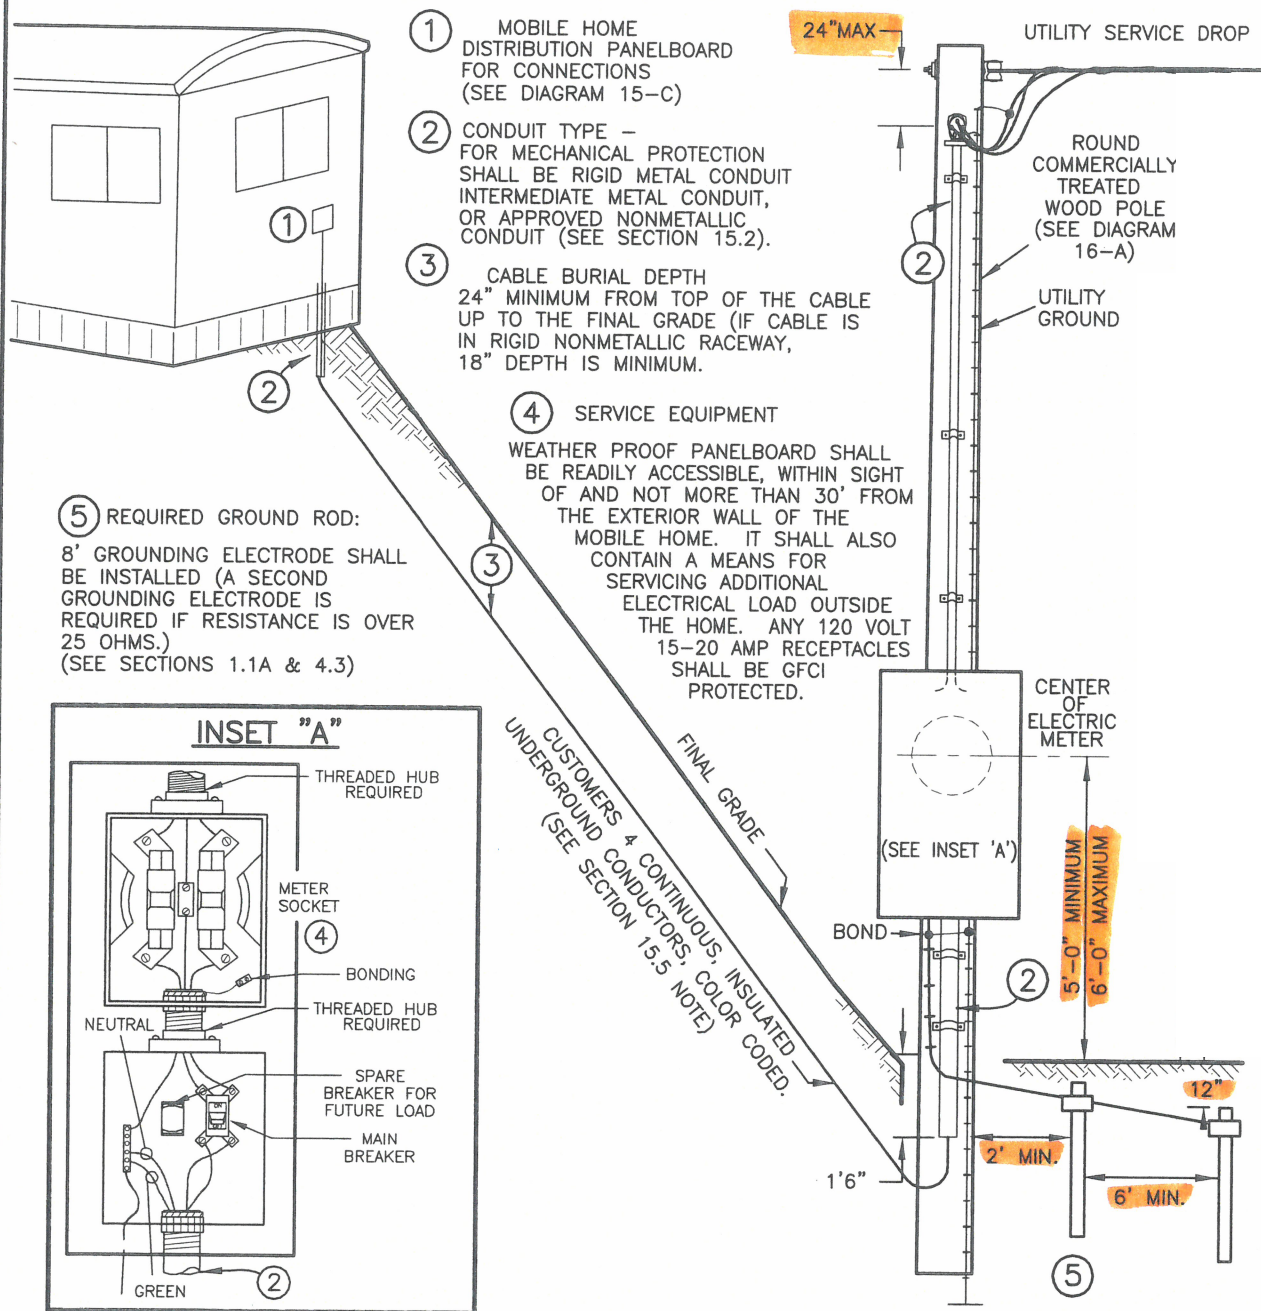

AMPS	SERVICE ENTRANCE WEATHERHEAD TO DISCONNECT CONDUCTOR THW OR EQUIV.				FEEDER CIRCUIT SERVICE POLE TO MOBILE HOME CONDUCTOR RHW,UF,URD,OR EQUIV.				INSULATED COPPER GROUNDING WIRE (GREEN)
	COPPER	CONDUIT	ALUM	CONDUIT	COPPER	CONDUIT	ALUM	CONDUIT	
100	#4	1 1/4"	#2	1 1/4"	#4	1 1/4"	#2	1 1/4"	#8
150	#1	1 1/4"	#2/0	1 1/2"	#1	1 1/2"	#2/0	1 1/2"	#6
200	#2/0	1 1/2"	#4/0	2"	#2/0	2"	#4/0	2"	#6

Diagram 15-B